Quick Installation Guide

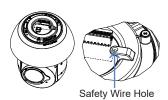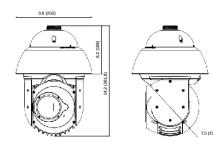## Accessories for Camera Package

Stainless Steel Screws (3x)

Quick Guide

Note: The camera accessory bag includes the safety wire with a hook on each end. Be sure to use this safety wire when installing for proper protection. Refer to the illustration below for the location of the safety wire hole.

Safety Wire Hole

Dimensions

9.8 (250)
6.2 (158)
14.2 (361.9)
7.5 (190)Ø

I/O Descriptions

AC	24 VAC INPUT
AC	24 VAC INPUT
AI-	ALARM IN-
AI+	ALARM IN+
AO-	ALARM OUT-
AO+	ALARM OUT+
◁))) -	LINE OUT-
◁))) +	LINE OUT+
◁))) -	LINE IN-
◁))) +	LINE IN+

Function Descriptions

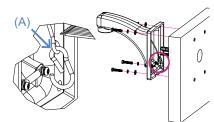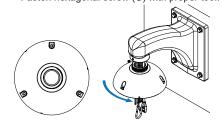| SD	SD CARD
R	RESET
⊥	POWER

Wall Mounting (V1001-WM)

1. Use the mount as a template and mark the four mounting holes. Fasten stainless steel anchors (4x).
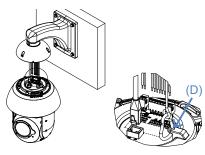
The safety wire has 2 hooks, one at each end. Hook one end of the safety wire (A) on the wall mount and pull the cable through the wall mount; fasten screws to secure the wall mount on the wall.
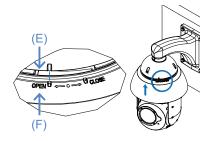
(A)

2. Pull the safety wire and cables through the Cap and rotate the Cap. Align one of Cap's screw holes (B) with the hole of mount (C). Fasten hexagonal screw (C) with proper tool.
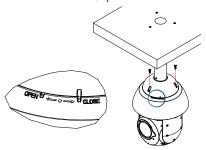
3. Hook the other end of the safety wire on (D). Connect the cable with terminal block and plug-in the corresponding holes and RJ-45 connector.

(D)

4. Attach camera and wall mount [align (E) with (F)].

(E)
(F)

5. Rotate the camera in the CLOSE direction and then tighten screws (provided) (3x) to fix the camera on the Cap.

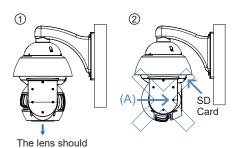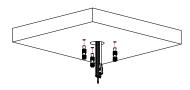# Quick Installation Guide

Warning Notes:
① After installing, adjust the camera direction so the lens is facing down and start the homing process.
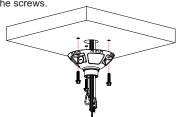② This is the wrong installation for reference. DO NOT let the lens face angle over the A line.

① ②

(A) → SD Card

The lens should face down
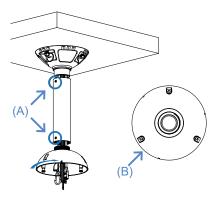
Pendant Mounting (V1001-PM)

1. Use the mount as a template and mark the locations of the mounting holes. Fasten stainless steel anchors (3x).
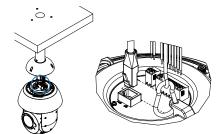
2. Pull the safety wire and cables through the bottom case of pendant mount and tighten the screws.
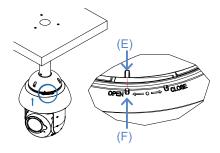
3. Fasten the tube and Cap, aligning B (one of the holes in Cap) with A (the hole in tube). Tighten the hexagonal screw (A) with proper tool.
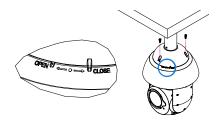
(A)

(B)

4. Hook one end of the safety wire (C) on the camera; hook the other end of the safety wire at a convenient location for the installation to secure the camera. Connect the cable with terminal block and plug-in the corresponding holes and RJ-45 connector.
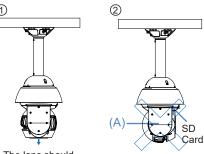
5. Attach the camera and pendant mount [align (D) with (E)].

(E)

OPEN ⟵ ○ ⟶ CLOSE

(F)

6. Rotate the camera in the CLOSE direction and then tighten screws (provided) (3x) to fix the camera on the Cap.
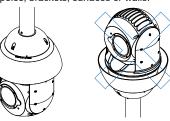
OPEN ⟵ ○ ⟶ CLOSE

Warning Notes:
① After installing, adjust the direction so the lens is facing down and start the homing process.
② This is the wrong installation for reference. DO NOT let the lens face angle over the A line.

① ②

(A) → SD Card

The lens should face down

③ DO NOT install the camera on unstable poles, brackets, surfaces or walls.

Web Browser

1. Open a browser on a computer.
2. Type the camera's IP address in the address bar (default is DHCP) and press Enter.
3. A pop-up window displays asking for login information. The default Admin login name is "ADMIN" and the password is customer selected.