

Quick Guide: Installation of V1001-CM with V1001-WM

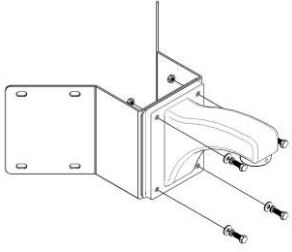


	<p>4 each - M8 screw-25mm/30mm 6 - M8 nut 6 - M8 spring washer 6 - M8 washer</p>	<p>8 - 5/16 anchor 8 - 5/16 3/4 bolt 8 - M8 washer 8 - M8 spring washer</p>
<p>Package Contents</p>		
<p>The corner mount is shipped as two 90° angle parts.</p>	<p>Use Screw Bag A for steps 2 and 4.</p>	<p>Use Screw Bag B for step 3.</p>
<p>Step 1</p>	<p>Step 2</p>	<p>Step 3</p>
<p>Align the holes of the two corner parts and insert the integral posts on one piece through the holes in second piece to assemble the mount.</p>	<p>Secure with M8 nut, M8 spring washer, M8 washer, tightening clockwise.</p>	<p>Using the mount as a template, mark and drill mounting holes in the wall; tap anchors into the holes. Secure the corner mount on the wall.</p>

Vicon part number 8009-8343-00-00

Vicon and its logo are registered trademarks of Vicon Industries Inc. All rights reserved.

Product specifications subject to change without notice.

	Step 4	
	Secure the Wall Mount onto the corner mount	

Vicon part number 8009-8343-00-00

Vicon and its logo are registered trademarks of Vicon Industries Inc. All rights reserved.

Product specifications subject to change without notice.