



Quick Guide: Installation of V1001-PL with V1001-WM

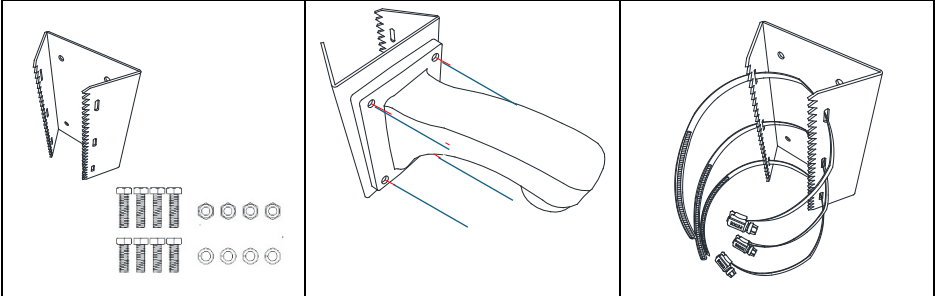

Package Contents	Step 1	Step 2
<p>Pole Mount 3 Straps Mounting Hardware: 4 each - M8 screw 20mm/30mm 4 - M8 nut 4 - M8 spring washer</p>	<p>Attach the wall mount on the pole mount as shown using hardware provided.</p>	<p>Thread the straps provided through the holes in the pole mount.</p>

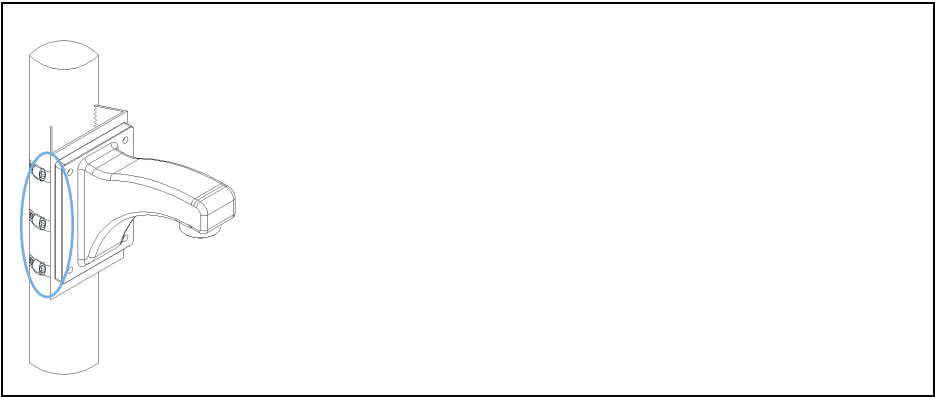

Step 3
<p>Fasten straps securely with flathead screwdriver</p>

Vicon part number 8009-8343-10-00

Vicon and its logo are registered trademarks of Vicon Industries Inc. All rights reserved.

Product specifications subject to change without notice.